


# mark and print your ballot



- ▶ The ballot marking device is touch screen operated
- ▶ An accessible device with audio is also available
- ▶ Follow the instructions on the screen to:
  - Enter your access code
  - Insert your ballot paper
  - Mark and print your ballot


1

Enter your access code and select **Accept**.

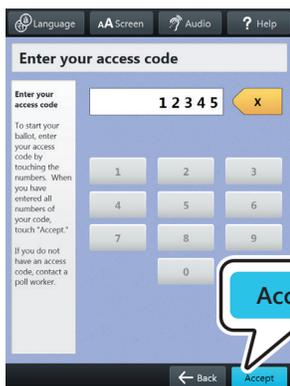

2

Insert one sheet of ballot paper as shown.

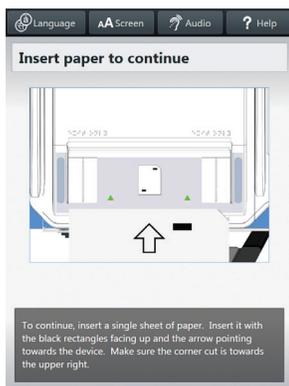


3

When ready, select **Begin Voting**.



4


Select your choice; select **Next** to go to the next contest.

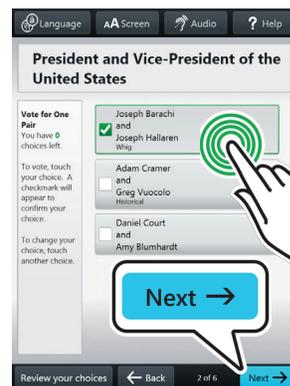

5

Review your ballot. When you're ready, select **Print Record**.

▶ If your ballot requires multiple sheets, you will be prompted when it is time to remove the first sheet and insert the next blank sheet.

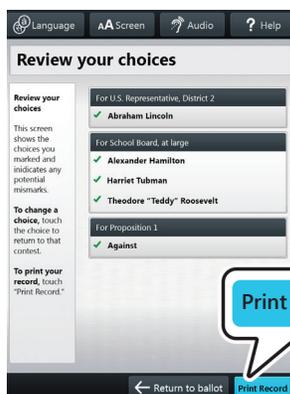

6

Retrieve your printed record and take all sheets to the scanner to cast your ballot.

